

 
VISION FIRES

Model Number: V3/100/A-1 (remote control)

DECORATIVE ELECTRIC FIRE

ADDENDUM TO OPERATING INSTRUCTIONS

IMPORTANT: The remote control handset for this appliance operates on a 'line of sight' basis. The receiver for the remote is marked on the image below by an 'X'. To ensure correct operation please aim the remote at this location and make sure the signal is not blocked by other objects close by, such as the fire canopy or surrounding fireplace.

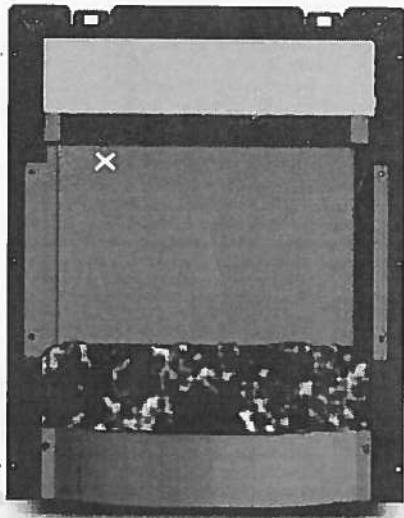

V3/100/A-1D Rev.1 (Oct 2015)

VISION FIRES

TECHNICAL SPECIFICATIONS

MODEL: V3/100/A-1	VOLTAGE: 220-240V	FREQUENCY: 50Hz
POWER: 1800W	LAMP: Total: 1.26W	
DIMENSIONS:	OVERALL	INSERT
WIDTH	482	407
HEIGHT	600	560
DEPTH	117	74

GENERAL NOTES

Before installation, fully read these instructions and follow all directions.

Do not place the appliance directly underneath a fixed socket outlet.

The electrical socket used must always be accessible so that disconnection is possible when performing maintenance or cleaning tasks.

When performing maintenance tasks or cleaning, always disconnect the appliance from the mains supply.

Always make sure that the appliance is secured firmly in order to avoid tipping.

Always use a fireguard if the appliance will be used around young children, elderly or infirm persons.

Never leave children unsupervised in the room if the appliance is switched on.

Never obstruct or cover the air inlet or heat outlet vents as this will cause the appliance to overheat.

Never use this appliance in or near a swimming pool, a bath or a shower.

Never use this appliance with a timer or any other device that automatically switches it on.

Wait until the heater is completely cooled before storing.

If the power chord is damaged it must be repaired by the manufacturer or a qualified person.

Do not place the appliance directly onto a carpeted area. The heat may cause discolouration.

Do not use aerosols or steam cleaners near the appliance.

Do not install the appliance close to curtains or other combustible materials.

Never use the appliance to dry clothes.

SERIAL NUMBER: ELC153800298

STEP 1

Determine the type of decorative frame or fascia that will be fitted to the appliance. If it's a separate steel, 3 sided trim and cast iron fret, move directly to step 2. If it's a one piece cast iron frame (with removable ash pan cover), then the appliance canopy will need to be removed. To do this remove the four screws indicated in Fig. 1 and gently lift the canopy away from the appliance. This component is no longer required.

STEP 2

Carefully lift the appliance into the opening/fireplace, ensuring that the power cable reaches a suitably positioned electrical outlet.

To secure the appliance mark through the four holes located on the outer appliance flanges (see Fig. 2). Carefully remove the appliance and, using a suitable bit, drill and plug the marked areas. Refit and secure the appliance with four appropriate screws.

STEP 3

Fit the decorative frame or fascia.

3 sided trim and cast iron fret - fit the trim to the fire using the magnets provided, then place the cast iron fret in front of the 'fuel bed'.

1 piece cast iron frame - before fitting, bend down the two 'hooks' at the top of the appliance. Hook the frame onto these hooks and secure by screwing into the bottom of the appliance using the two short screws provided (see Fig. 3).

Complete installation by arranging the pebbles or coals on the top of the fuel bed.

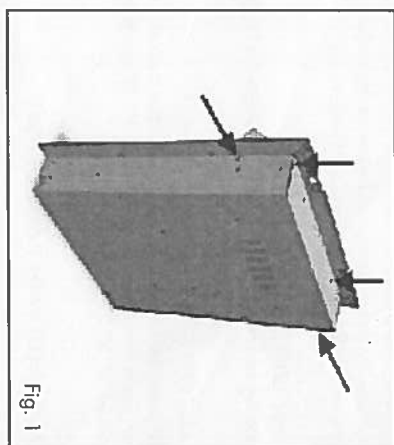


Fig. 1

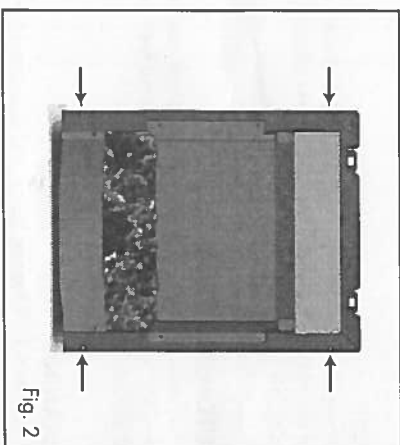


Fig. 2

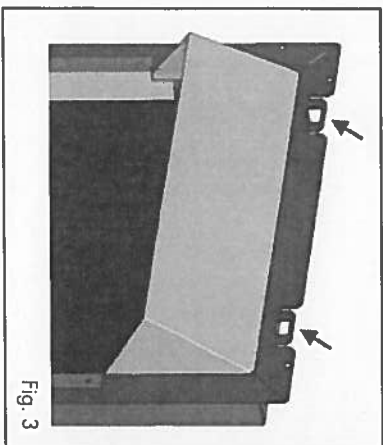


Fig. 3

OPERATING INSTRUCTIONS

To operate the appliance locate the power on/off switch under the heater canopy and press once to turn on. Alternatively, press the on/off button on the remote control handset. The appliance can now be set to one of three settings by using the remote handset only.

FLAME EFFECT ONLY (NO HEAT)

Press the button marked 'LAMP' to activate the flame effect.

FLAME EFFECT WITH 0.9 KW OF HEAT

First press the button marked 'LAMP' (this must always be pressed first in order to activate heat settings). Then press the button marked 'HEAT 1'. (You can change to 1.8kW at this stage by pressing the button marked 'HEAT 2')

FLAME EFFECT WITH 1.8KW OF HEAT

First press the button marked 'LAMP'. Then press the button marked 'HEAT 2'.

NOTE:

The remote control handset uses 2x AAA batteries. Make sure the batteries are installed correctly. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.

AUTOMATIC CUT-OFF

If the appliance overheats it will automatically switch itself off as a precautionary measure. To reset the cut-off switch you must turn off & disconnect the fire from the mains supply and leave to cool for approximately 20 minutes.

CLEANING

Always switch off the appliance and disconnect from the mains before cleaning. Clean the outside of the appliance with a dry soft cloth. Do not use furniture polish or abrasive materials.

VISION FIRES

Model Number: V3/100/A-1 (remote control)

DECORATIVE ELECTRIC FIRE

INSTALLATION & USER INSTRUCTIONS

GB IE

CE

IMPORTANT INFORMATION INSIDE. PLEASE READ BEFORE USE

These instructions must be left with the appliance for future reference and maintenance information.

VISION FIRES

IMPERIAL POINT, EXPRESS TRADING ESTATE, STONEHILL ROAD,
FARNWORTH, BOLTON. BL4 9TN.

V3/100/A-1D Rev.1 (Oct 2015)

VISION FIRES